


144P/144S Astragal

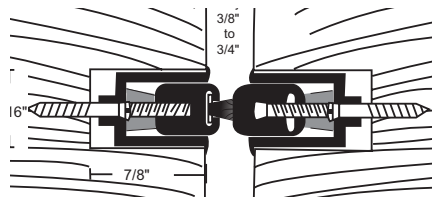

Installation Instructions

1. Cut astragal to length. **NOTE Cut from one end, no closer than 1" to the adjusting screw. If necessary to cut more, cut other end.**
2. Prepare the door by mortising 7/8" deep x 9/16" .
3. Remove gasketing from bar.
4. Remove adjusting screws and inner bar.
5. Position outer case into mortised portion of door.
6. Fasten outer case with screws provided
7. Replace inner bar and adjusting screws.
8. Replace gasketing.
9. Adjust so astragal does not impede proper closing and latching of doors.

Instrucciones de Instalación

1. Corte el astrágalo a la medida. **NOTA: Corte desde un extremo, de manera que quede un espacio mínimo de 1" al tornillo de ajuste. Si necesita cortar más, corte del otro extremo.**
2. Prepare la puerta tallando una muesca de 7/8" de profundidad x 9/16".
3. Remueva el empaque de la barra.
4. Remueva los tornillos de ajuste y la barra interna.
5. Coloque la cubierta exterior en el área de la puerta donde talló la muesca.
6. Atornille la cubierta exterior con los tornillos suministrados.
7. Reinstale la barra interna y los tornillos de ajuste.
8. Reinstale el empaque.
9. Ajuste el astrágalo de modo que no impida cerrar y correr debidamente el pasador de las puertas.