


149M / 189M Magnetic Astragal

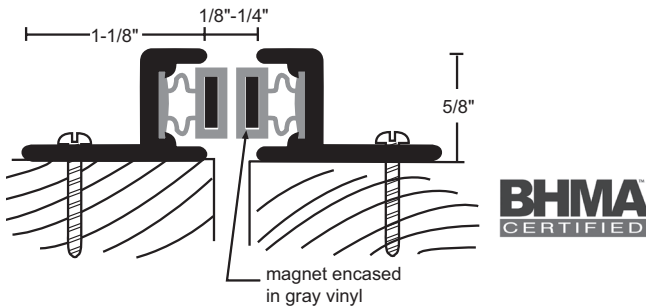

Maximum distance between two pieces 5/16".
Install only on outside of out-swinging doors or inside of in-swinging doors.

Installation Instructions

1. Cut astragal to length.
2. Position astragal as shown above.
3. Mark screw holes.
4. Drill pilot holes for screws using a 7/64" drill bit.
5. Install with screws provided, working from top down, adjusting for proper distance at each screw.
6. Adjust astragal so it does not impede proper closing and latching of doors.

La distancia máxima entre dos piezas es de 5/16".
Instale solamente en el exterior de puertas que abren hacia afuera o en el interior de puertas que abren hacia adentro.

Instrucciones de Instalación

1. Corte el astrágalo a la medida.
2. Coloque el astrágalo como se indica arriba.
3. Marque los orificios para los tornillos.
4. Taladre orificios guía para tornillos con una broca de 7/64".
5. Instale con los tornillos suministrados, procediendo de arriba hacia abajo, ajustando para mantener la distancia adecuada en cada tornillo.
6. Ajuste el astrágalo de modo que no impida cerrar y correr debidamente el pasador de las puertas.