


176 Astragal Seal

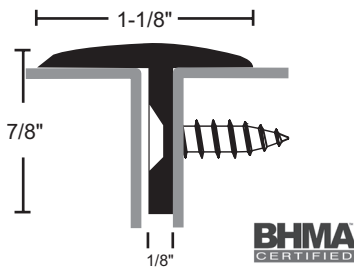

Installation Instructions

1. Cut astragal to length.
2. Place astragal as shown above, with gasketing slightly compressed.
3. Mark screw holes.
4. Drill pilot holes for screws using 7/64" bit.
5. Install with screws provided, working from one end to the other.
6. Adjust astragal so it does not impede closing and latching of doors.

Instrucciones de Instalación

1. Corte el astrágalo a la medida.
2. Coloque el astrágalo como se indica arriba, con los empaques levemente comprimidos.
3. Marque los orificios para los tornillos.
4. Taladre los orificios guía para los tornillos con una broca de 7/64".
5. Instale usando los tornillos suministrados, procediendo de un extremo hacia el otro.
6. Ajuste el astrágalo de modo que no impida cerrar y correr debidamente el pasador de las puertas.