




INSTALLATION INSTRUCTIONS

16, 17

Drip Strips

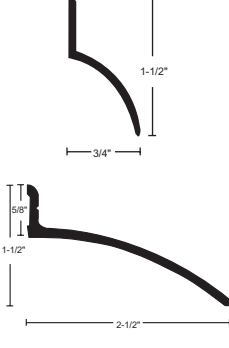

BHMA
CERTIFIED

Typical installation is to exterior face of frame header. 17 can also be applied to exterior face of door at sill.

Length of drip strip should extend beyond width of door. Install full width of frame header if possible.

1. Mark hole locations.
2. Drill pilot holes for screws using a $\frac{7}{64}$ " bit.
3. Fasten screws, working from one end to the other.
4. Caulk top edge of drip strip and around each screw to prevent water penetration.

ngp.com
1-800-NGP-RUSH

FAX: (800) 255-7874
QUOTES: quotes@ngp.com
ORDERS: orders@ngp.com

NGP MEMPHIS

4985 East Raines Road
Memphis, TN 38118

CARSON CITY

3689 Arrowhead Drive
Carson City, NV 89706