




## INSTALLATION INSTRUCTIONS

# Fingerguard 2248

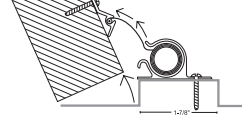

This product should be mounted before any panic bars or other surface mounted hardware.

1. Position bottom of Fingerguard flush with bottom of door.
2. Mount roller portion on door frame soffit flush with door stop edge closest to door.
3. Mount the fabric retainer to the surface of the door, approx. 2 1/4" from edge of the door to outside edge of metal retainer.

NOTE: With door closed, the two (2) metal portions should nestle together.



POSITIVE  
PRESSURE TESTED  
MISCELLANEOUS  
FIRE DOOR  
ACCESSORY

**ngp.com**  
**1-800-NGP-RUSH**

FAX: (800) 255-7874  
QUOTES: [quotes@ngp.com](mailto:quotes@ngp.com)  
ORDERS: [orders@ngp.com](mailto:orders@ngp.com)

**NGP MEMPHIS**  
4985 East Raines Road  
Memphis, TN 38118

**CARSON CITY**  
3689 Arrowhead Drive  
Carson City, NV 89706