




331

Polypropylene Double Fin Door Shoe

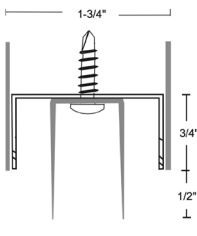

- ▶ Aluminum Alloy 6063, T5 Temper
- ▶ Designed for Hollow Metal Doors w/ Inverted Bottom Channel
- ▶ #8 x 3/4" TEK Screws Furnished
- ▶ Available for 36" and 48" Widths



ngp.com
1-800-NGP-RUSH

FAX:
(800) 255-7874


QUOTES:
quotes@ngp.com

ORDERS:
orders@ngp.com



INSTALLATION INSTRUCTIONS

331

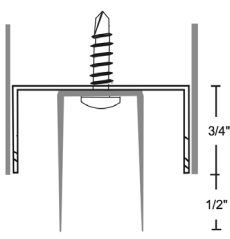

1. Measure and cut door shoe to fit.
2. Notch to fit around door seam if needed.
3. Position shoe in bottom channel of door as illustrated above.
4. Install with TEK screws provided.
4. Make sure gasketing does not impede proper closing and latching of door.

ngp.com

1-800-NGP-RUSH

FAX: (800) 255-7874

QUOTES: quotes@ngp.com

ORDERS: orders@ngp.com

NGP MEMPHIS

4985 East Raines Road

Memphis, TN 38118

CARSON CITY

3689 Arrowhead Drive

Carson City, NV 89706