



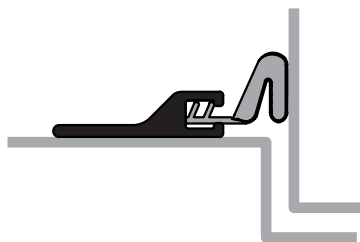

384 Foam Seals

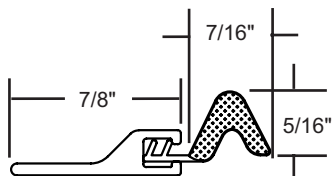

Installation Instructions

1. Cut to fit.
2. Mark screw holes.
3. Drill pilot holes for screws using a $\frac{7}{64}$ " drill bit.
4. Install with screws provided, working from one end to the other.
5. Adjust position so that gasket is slightly compressed against door but does not impede proper closing and latching.

**APPLICATION WARNING:
DO NOT DRILL THROUGH GASKETING MATERIAL**

Instrucciones de Instalación

1. Corte a la medida.
2. Marque los orificios de los tornillos.
3. Taladre orificios guía para los tornillos usando una broca de $\frac{7}{64}$ ".
4. Instale usando los tornillos suministrados, procediendo de un extremo hacia el otro.
5. Ajuste la posición hasta comprimir ligeramente el empaque contra la puerta sin que impida cerrar y correr debidamente el pasador de las puertas.

**PRECAUCIÓN AL INSTALAR:
NO TALADRE A TRAVÉS DEL EMPAQUE**