




## INSTALLATION INSTRUCTIONS

# 9225 Strike Shims

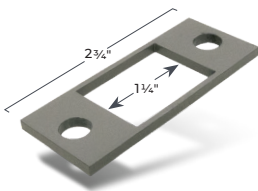

- ▶ UL Certified Solution for 60 and 90 Minute Fire Doors with Excessive Clearance Between Door and Frame Over  $\frac{1}{8}$ " , up to  $\frac{3}{8}$ "
  - ▶ UL Certified Solution for 20 and 45 Minute Fire Doors with Excessive Clearance Between Door and Frame Over  $\frac{1}{8}$ " , up to  $\frac{9}{16}$ "
1. Install Underneath Strike Plate Furnished with Lock Set.
- ▶ NGP 9200 Intumescent Seal Excessive Clearance Solution is also Required Where Excessive Clearance Occurs at Jambs and Head on 20 and 45 Minute Fire Doors
  - ▶ NGP GAP90 or GAP90N Excessive Clearance Solutions Are Also Required Where Excessive Clearance Occurs at Jambs and Head on 60 and 90 Minute Fire Doors

Certified for Use in US and Canada

Hinge Edge of Category B Wood Doors Require a UL Certified Category G Edge Seal.



POSITIVE  
PRESSURE TESTED  
MISCELLANEOUS  
FIRE DOOR  
ACCESSORY

2.25

**ngp.com**  
**1-800-NGP-RUSH**

FAX: (800) 255-7874

QUOTES: [quotes@ngp.com](mailto:quotes@ngp.com)

ORDERS: [orders@ngp.com](mailto:orders@ngp.com)