




## D690, C697, D698, C699 Nylon Brush Door Seals

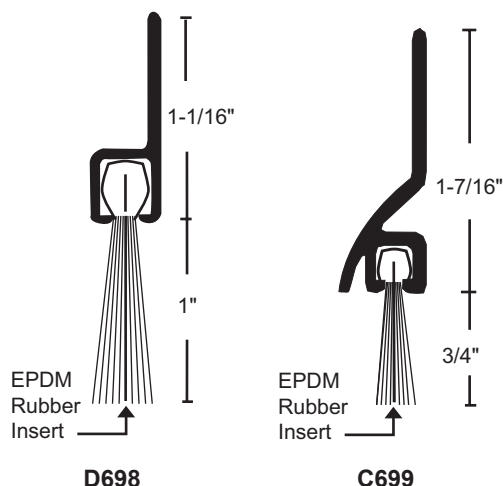

### Installation Instructions

1. Remove brush from metal retainer.
2. Cut brush to fit opening, using the cutting section of pliers or diagonal cutters. If bristles are not secure, crimp the end of the metal or use a drop of adhesive to secure the brush.
3. Cut the metal retainer to length.
4. Replace brush in metal retainer.
5. With door closed, position seal mark screw holes.
6. Drill pilot holes for screws with a  $\frac{7}{64}$ " bit.
7. Install with screws provided.
8. Slightly peen the ends of each retainer to secure the brush from moving.
9. Adjust position so sweep does not impede proper closing and latching of door.

### Instrucciones de Instalación

1. Remueva el cepillo del retenedor de metal.
2. Corte el cepillo a la medida de la abertura usando las cuchillas de las pinzas o con pinzas de corte diagonal. Si las cerdas no están firmes, arquee la orilla del metal o use una gota de adhesivo para asegurar el cepillo.
3. Corte el retenedor de metal a la medida.
4. Reinstale el cepillo dentro del retenedor de metal.
5. Con la puerta cerrada, coloque el sello y marque los orificios de los tornillos.
6. Taladre orificios guía con una broca de  $\frac{7}{64}$ ".
7. Instale con los tornillos suministrados.
8. Golpee ligeramente las orillas de cada retenedor con un martillo de bola para asegurarse que el cepillo no se mueva.
9. Ajuste el sella puerta para que no impida cerrar y correr debidamente el pasador de las puertas.