



For the complete list of Aluminum Sliding Door Hardware, the most up-to-date product information and installation instructions, scan the QR code or visit ngp.com.




SWPD-LPBRKT

Sidewall Mount: Low-Profile Bracket

INSTALLATION INSTRUCTION

1. Brackets required 3" from each end of track and not further than 24" between brackets.
2. Fasten brackets securely to channel of track.
3. Mount brackets with track to the wall.

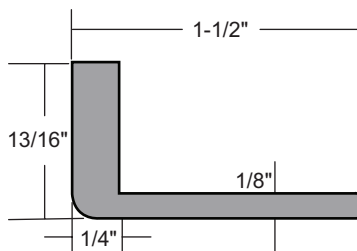

NGP-SLI-SWPD-LPBRKT-PRI-0721-A



NGP MEMPHIS
4985 East Raines Road
Memphis, TN 38118
orders@ngp.com

NGP VEGAS
4584 Calimesa Street
Las Vegas, NV 89115
vegasorders@ngp.com

ngp.com
1-800-NGP-RUSH



Para obtener la lista completa de Herrajes de Aluminio para Puertas Corredizas, información actualizada de los productos e instrucciones de instalación, escanee el código QR o visite ngp.com




SWPD-LPBRKT

Montaje En Pared: Soporte De Perfil Bajo Para Puerta Corrediza Empotrada

INSTRUCCIONES DE INSTALACIÓN

1. Es necesario instalar soportes a 3" de cada extremo del riel y a no más de 24" de separación entre soportes.
2. Sujete firmemente los soportes al canal del riel.
3. Monte en la pared los soportes con el riel.

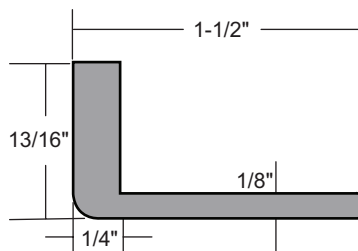

NGP-SLI-SWPD-LPBRKT-PRI-0721-A



NGP MEMPHIS
4985 East Raines Road
Memphis, TN 38118
orders@ngp.com

NGP VEGAS
4584 Calimesa Street
Las Vegas, NV 89115
vegasorders@ngp.com

ngp.com
1-800-NGP-RUSH