





INSTALLATION INSTRUCTIONS

Thermoplastic (T) Door Bottom Shoes



WARNING:

These products can expose you to chemicals including DEHP Plasticizer or DINP Diisononyl phthalate, which are known to the State of California to cause cancer and/or developmental and reproductive harm. For more information, go to P65Warnings.ca.gov.

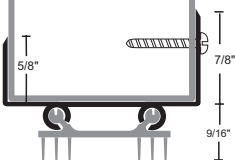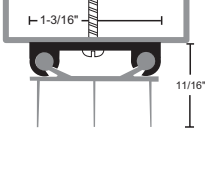

POSITIVE PRESSURE TESTED GASKETING MATERIALS FOR FIRE DOORS FOR APPLICATION TO HOLLOW-METAL-TYPE FIRE DOORS RATED UP TO 3 HOURS AND WOOD-TYPE FIRE DOORS RATED UP TO 1½ HOURS. CATEGORY H

SMOKE AND DRAFT CONTROL GASKETING (CATEGORY H) TESTED TO UL 1784; MEETS REQUIREMENTS OF NFPA 105, IBC FOR USE ON "S" LABEL DOORS.

ngp.com

1-800-NGP-RUSH

FAX: (800) 255-7874

QUOTES: quotes@ngp.com

ORDERS: orders@ngp.com



INSTALLATION INSTRUCTIONS

Thermoplastic (T) Door Bottom Shoes

1. Measure and cut metal retainer and gasketing insert to fit.
2. Items with drip cap should be notched to clear stops on jambs before installation.
3. Position seal on door with gasket compressed $\frac{3}{16}$ " against sill.
4. Mark screw holes.
5. Drill pilot holes with a $\frac{7}{64}$ " bit.
6. Install with screws provided.
7. Slide gasketing into metal retainer until a 6" length remains out. Bend this section against the retainer to a 45° angle to create a slight bow in the material to create a tension to keep the gasketing tight, then release. Slide the rest of the way into the retainer. For extra security, repeat the bending process on opposite end.
8. Adjust height so that gasket does not impede proper closing and latching of door.



ngp.com

1-800-NGP-RUSH

FAX: (800) 255-7874

QUOTES: quotes@ngp.com

ORDERS: orders@ngp.com

NGP MEMPHIS

4985 East Raines Road

Memphis, TN 38118

CARSON CITY

3689 Arrowhead Drive

Carson City, NV 89706