


Metal Edge/ Astragal Set

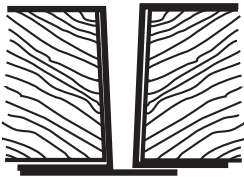

Installation Instructions

NOTE: This product was ordered and manufactured to the NET door height. No cutting or trimming should be required. Changing the Net length will effect the alignment of any hardware preps.

1. Position on door edge, aligning cut-outs with hardware preps on door.
2. Mark screw holes.
3. Drill pilot holes for screws using a 1/8" drill bit.
4. Install with screws provided.

Instrucciones de instalación

NOTA: Este producto se pidió y fabricó para la altura NETA de la puerta. No debe necesitar cortes ni recortes. Un cambio en la longitud Neta afectará el encuadre de las preparaciones para instalación de los herrajes.

1. Coloque en el borde de la puerta, alineando los orificios con las preparaciones para herrajes de la puerta.
2. Marque los orificios para los tornillos.
3. Taladre los orificios guía para los tornillos usando una broca de 1/8".
4. Instale con los tornillos suministrados.



POSITIVE PRESSURE TESTED GASKETING MATERIALS
FOR FIRE DOORS
FOR APPLICATION TO HOLLOW-METAL-TYPE FIRE DOORS
RATED UP TO 3 HOURS AND WOOD-TYPE FIRE DOORS
RATED UP TO 1-1/2 HOURS.
CATEGORY J

MATERIAL DE EMPAQUE PARA PUERTAS CORTAFUEGO
SOMETIDOS A PRUEBAS DE PRESION POSITIVA
PARA USARSE EN PUERTAS METALICAS HUECAS CORTAFUEGO
CERTIFICADAS HASTA 3 HORAS Y PUERTAS DE MADERA CORTA-
FUEGO CERTIFICADAS HASTA 1-1/2 HORAS
CATEGORIA J