


## Flood Shield



### Installation Instructions

1. Position mounting channels with radius corners up, in desired location with larger holes facing exterior.
2. With channels vertically aligned, mark screw holes.
3. Drill pilot holes for screws using 9/64" drill bit.
4. Apply continuous bead of waterproof caulk to center of mounting side of channels.
5. Install channels with screws provided.
6. Caulk bottom outer edges of channels to floor surface.

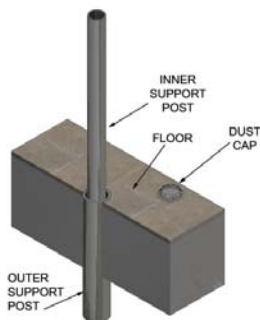

Optional Support Post: Bore 8" deep hole in floor surface for 1-1/2" O.D., outer support post, tangent to the center of the interior side of the plate. Install outer post in hole with top flush with floor surface. Cover with dust cap. When

inserting shield, remove dust cap and insert inner support post.

### Operating Instructions

Inspect channels and floor surface to insure proper working condition.

Inserting Shield: With springs and label facing out, insert bottom of plate into channels.

Push outward to compress springs while lowering plate.

Removing Shield: While compressing springs to remove tension off the gasketing, pull straight up on plate to remove from channel.

Storing Shield: Store the shield plate indoors with no weight against the gasket.

