Anemostat
DOOR PRODUCTS

INSTALLATION INSTRUCTIONS

L-VRSG-2, L-VRSG-3, L-VRSG-3-TB

Vandal Resistant
Security Louver

For 1¾" Thick Doors

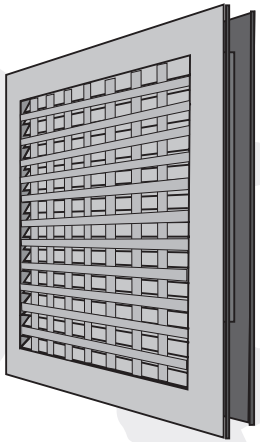

Undersized 1/16" for Clearance

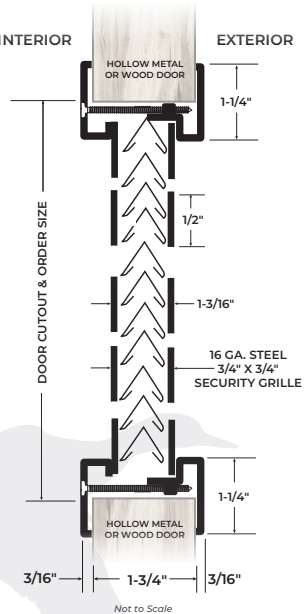

Not to Scale

INSTALL LOUVER

1. Cut out door in accordance with door manufacturers procedure.
2. If door cut-outs have radius corners it may be necessary to square them out prior to installing the louver.
3. Position outer frame with louver core, in door cut out.
4. Position inner frame and insert and start all screws before fully tightening.
5. Tighten screws or Thru-Bolts using crisscross pattern. Use caution when using power screw driving equipment to avoid stripping the material.

FIELD PAINTING: for best results scuff finish with a Scotch-Brite® pad prior to painting.

Fax: (800) 255-7874
Email: info@ngp.com
ngp.com
1-800-NGP-RUSH
Quotes: quotes@ngp.com
Orders: orders@ngp.com